

# KIRA TECH TIP

## Feed An Axis Without Running a Spindle

The axis will only feed if the spindle is running and up to speed. In applications involving broaching and back chamfering when the spindle does not run:

Change Parameters:  
#3708 bo      SAR=0

This technical bulletin is provided as a free service by Shoprag.com