

KIRA TECH TIP

Frequent Z Axis Overtravel

If Z Axis overtravels occur during a tool change, check the spindle orientation. Spindle keys need to be aligned within 0.008” from key to key

Change Parameter #4077 to reset orientation

This technical bulletin is provided as a free service by Shoprag.com